


THULE[®]
SWEDEN

Fitting instructions
Instrucciones de montaje
Instruções de Montagem
安装说明

OPEL Meriva, 5-dr MPV, 03-

**RAPID
SYSTEM**




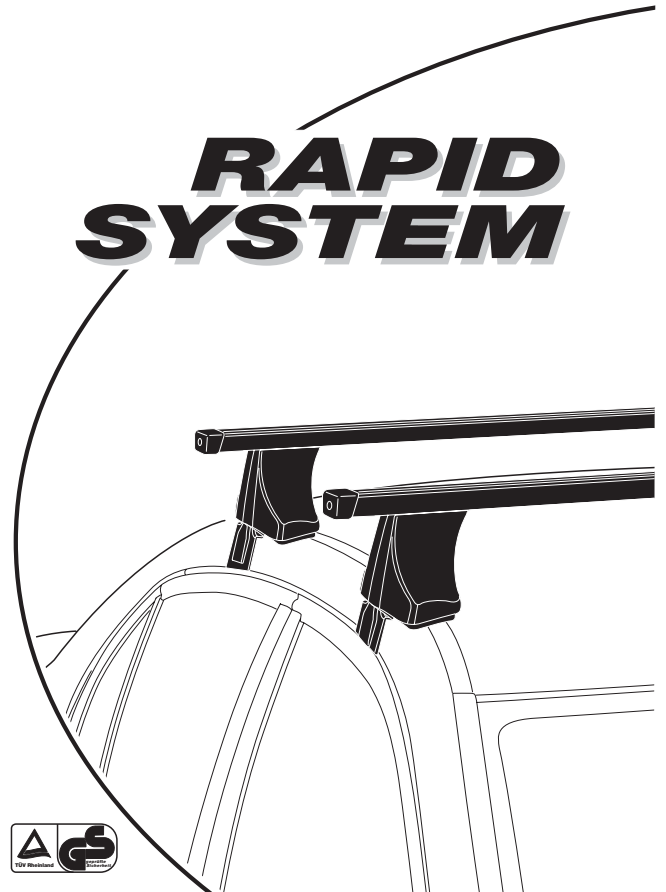


Follow me...


THULE[®]
SWEDEN

Box 69, 330 33 Hillerstorp, SWEDEN
www.thule.com


645•3DF/AF/501-7162

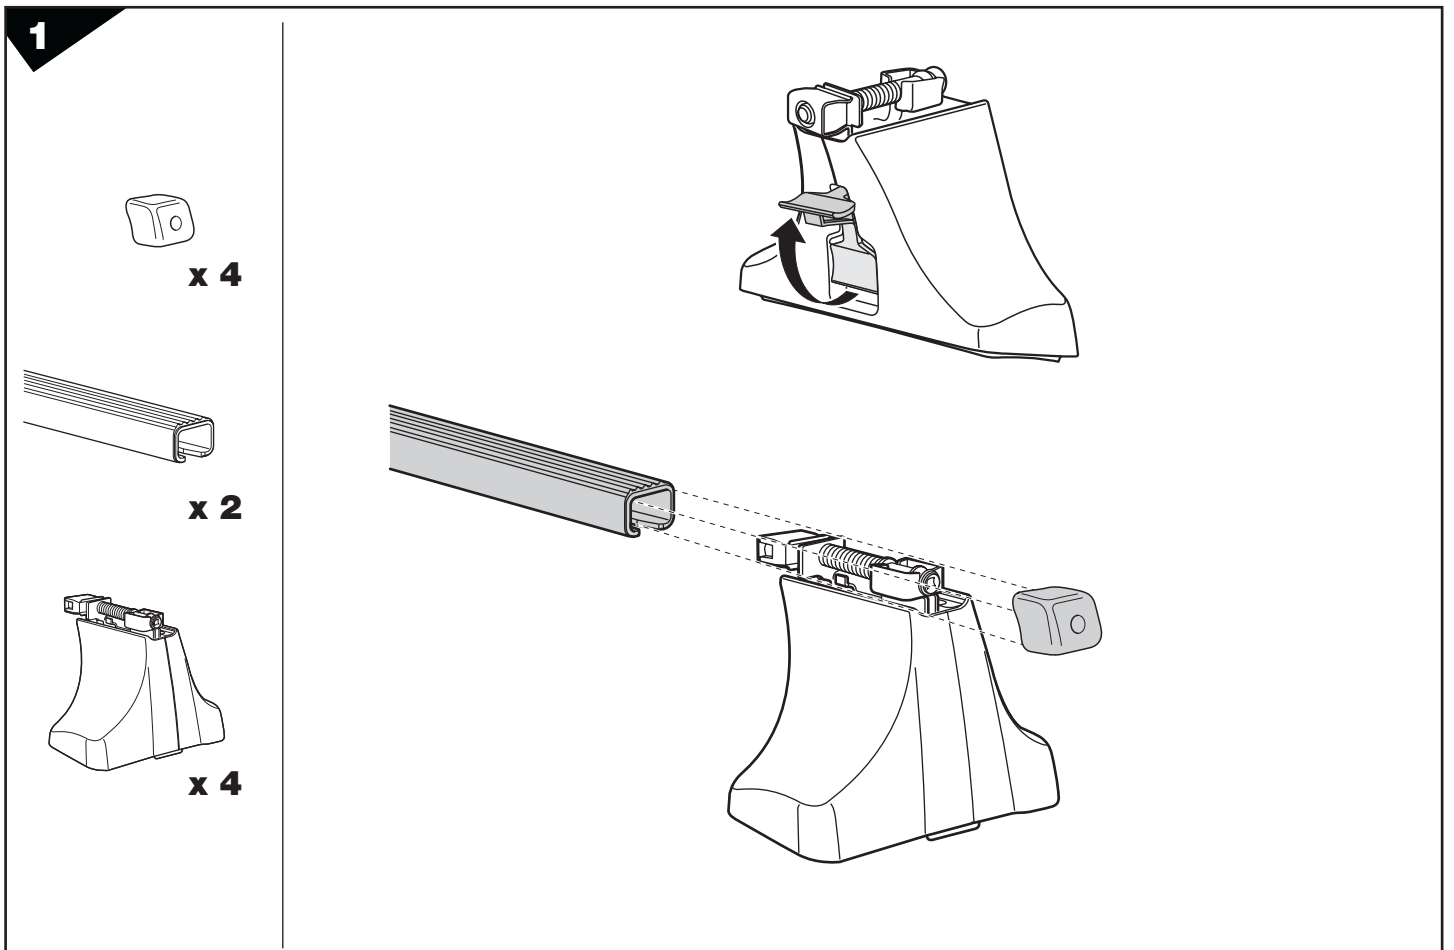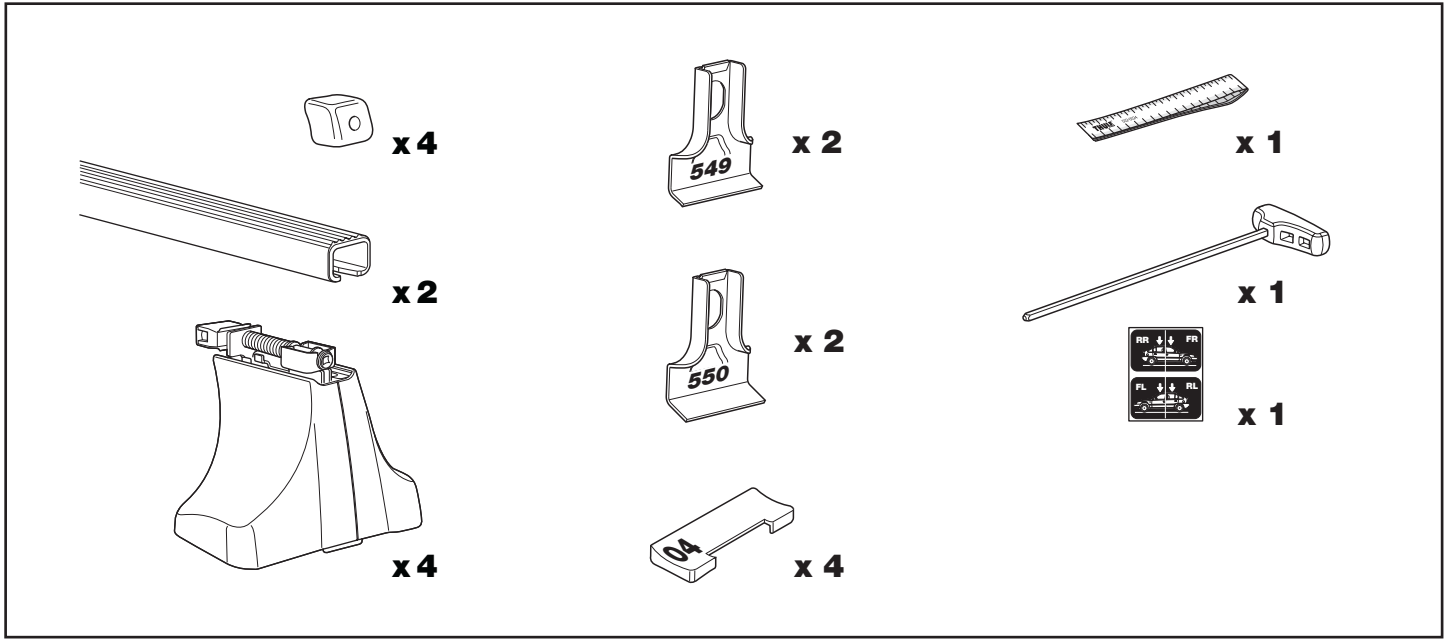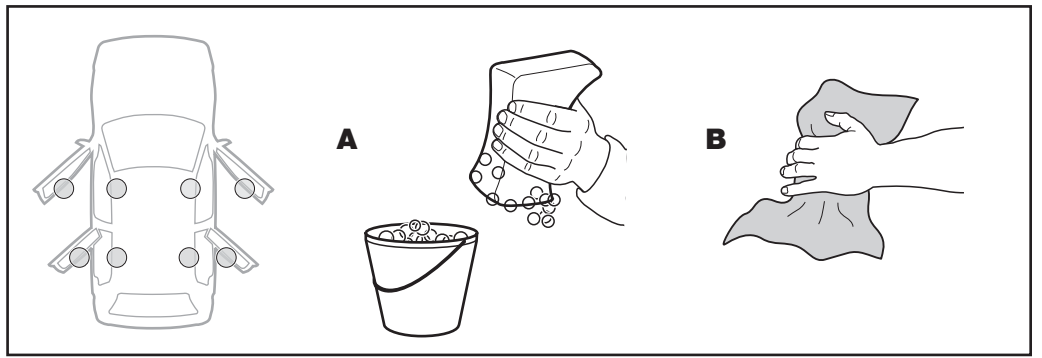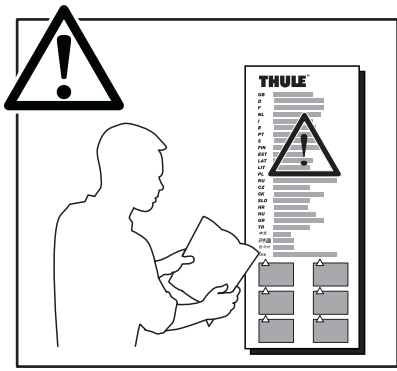

2

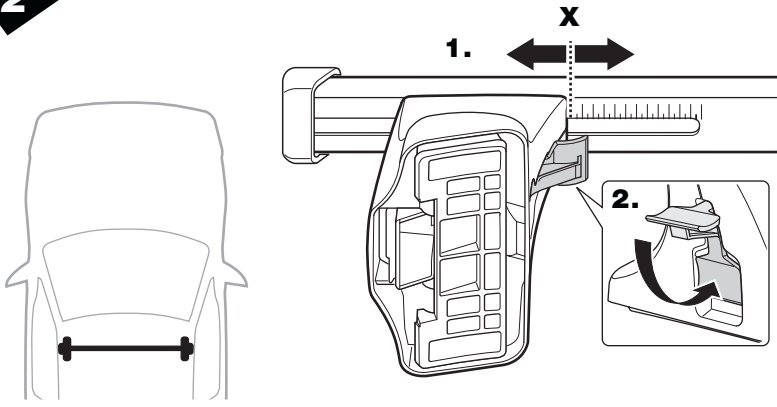


OPEL Meriva, 5-dr MPV, 03-	X 38,5
----------------------------	------------------

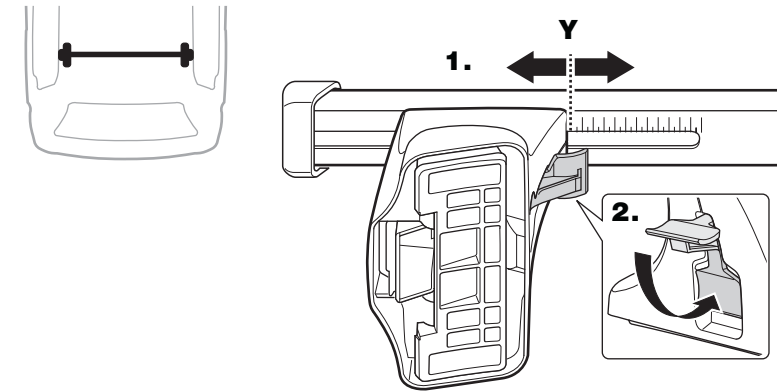


OPEL Meriva, 5-dr MPV, 03-	Y 32,5
----------------------------	------------------


3

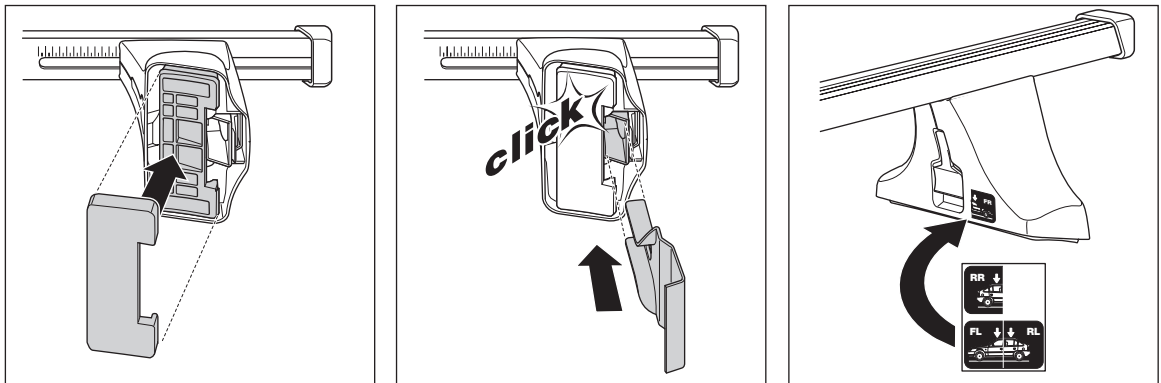




OPEL Meriva, 5-dr MPV, 03-

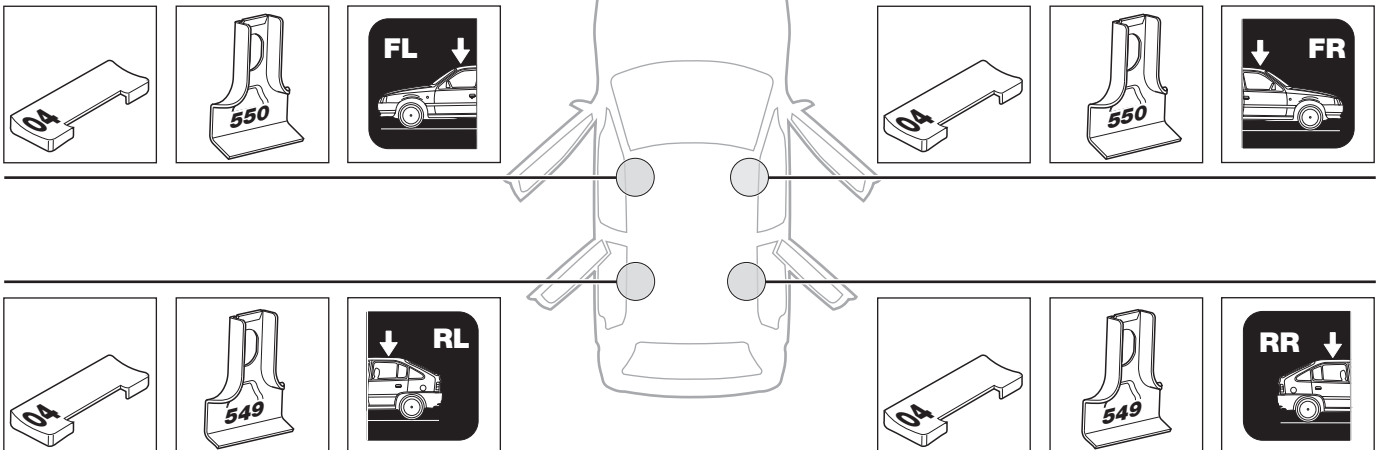

4

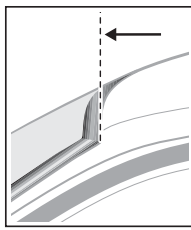







250 mm 700 mm

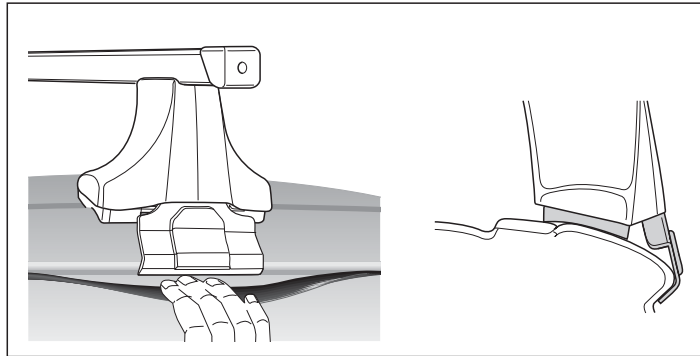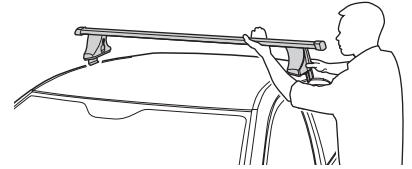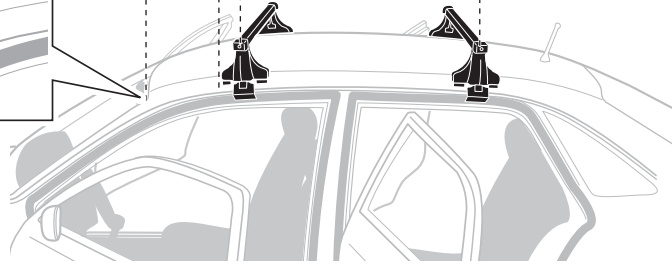

5



Tighten alternately
Alternare il serraggio delle viti
Aperte alternadamente
交替拧紧

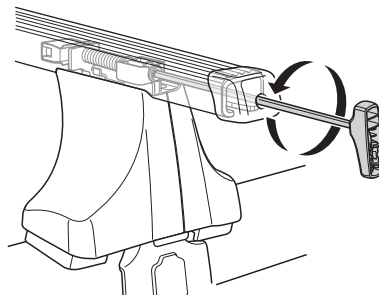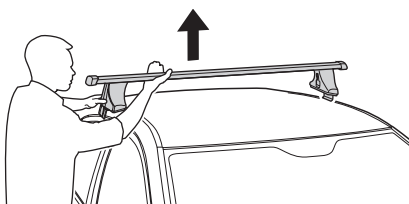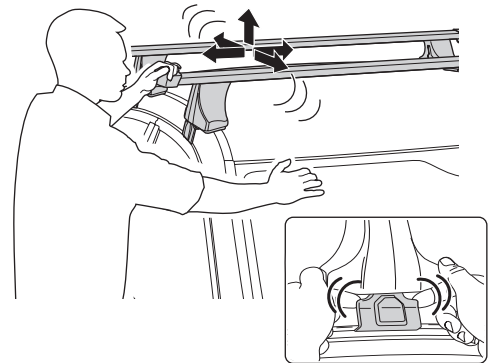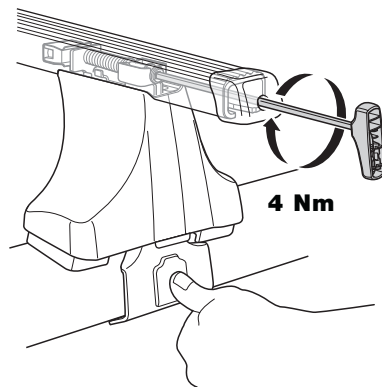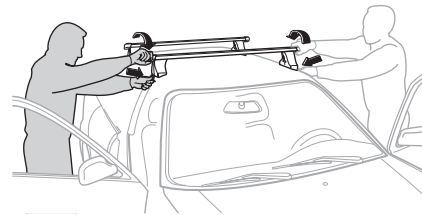

Fit Tips!

