

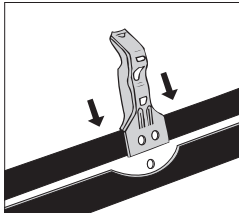
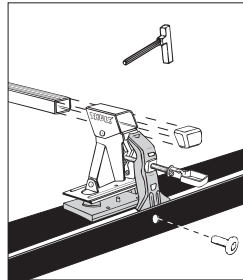
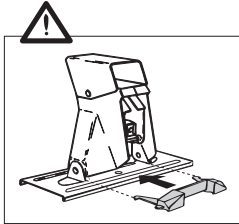

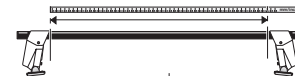


Thule System Kit 046

**FORD Scorpio 4-dr Sedan, 90–
5-dr Hatchback, 85–**

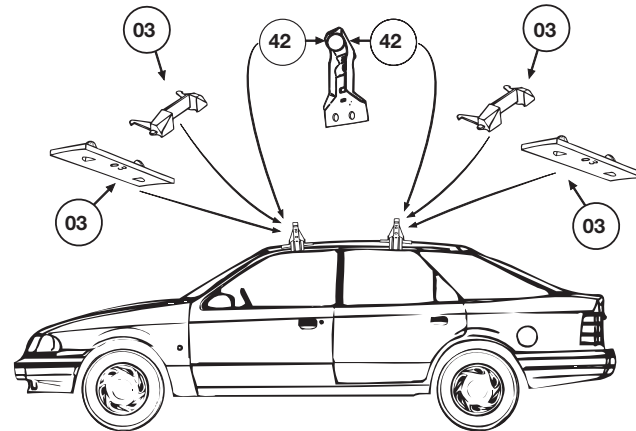

IMPORTANT!
When unmounting the loadcarrier please fasten the screw M8x25 in the screwholes of the car. It will prevent dirt and water to penetrate.

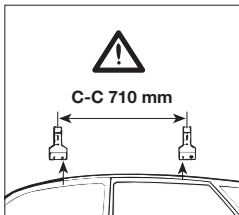

Front	Rear
887 mm / 34 ⁷ / ₈ inch	870 mm / 34 ¹ / ₄ inch