
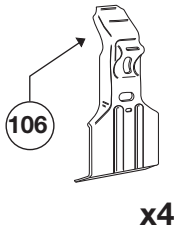
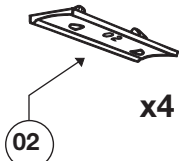



# Thule System Kit 117

HONDA Accord 4-dr, 90-  
HONDA Accord 2-dr, 90-



*Screw the load carrier into position alternating between the feet, and maintaining constant pressure on the bracket.*

During the fitting.

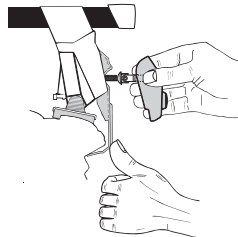

After the fitting

