

**THULE**<sup>®</sup>  
SWEDEN

**S** Monteringsanvisning  
**GB** Fitting instructions  
**D** Montageanleitung  
**F** Instructions de montage  
**NL** Montage-instructies  
**FIN** Asennusohje  
**E** Instrucciones de montaje  
**I** Istruzioni per il montaggio  
**CZ** Návod na montáž  
**PL** Instrukcja montażu  
**HU** Szerelési utasítások  
**RU** Инструкции по установке  
**EST** Paigalduseeskirjad  
**SLO** Navodila za pritrjevanje

한국어 장착 지침

日本語 取扱(取付)説明書

中文 安装说明

**OPEL**

Vivaro, 2-dr Single Cab, 01-  
Vivaro, 4/5-dr Van, 01-  
Vivaro, 4/5-dr Van, 01-  
(with high roof)

**NISSAN**

Primastar, 4/5-dr Van, 02-

**RENAULT**

Trafic, 2-dr Single Cab, 01-  
Trafic, 4/5-dr Van, 01-  
Trafic, 4/5-dr Van, 01-  
(with high roof)

**Kit 2112**

1061-1-2112

Se não houver instruções no seu idioma, entre em contato com os funcionários do estabelecimento para obter informações

Eğer talimatlar dilinizde basılı değilse, lütfen atölye personelinden bilgi isteyiniz.


Αν οι οδηγίες δεν εκτυπώνονται στη γλώσσα σας, παρακαλούμε ζητήστε πληροφορίες από το προσωπικό του καταστήματος.


ถ้าไม่มีคำแนะนำในภาษาของคุณ โปรดติดต่อพนักงานในร้านเพื่อขอข้อมูล

**THULE**<sup>®</sup>  
SWEDEN

Box 69, 330 33 Hillerstorp, SWEDEN  
www.thule.com

438\*3DF2/501-2112-05

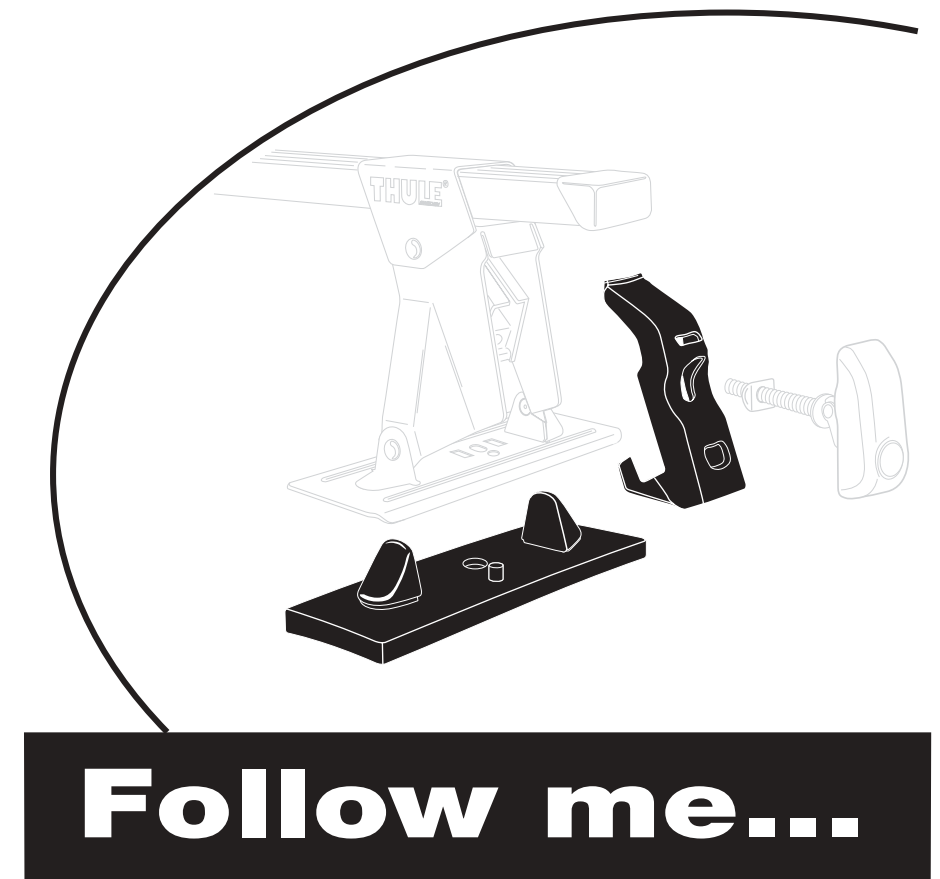

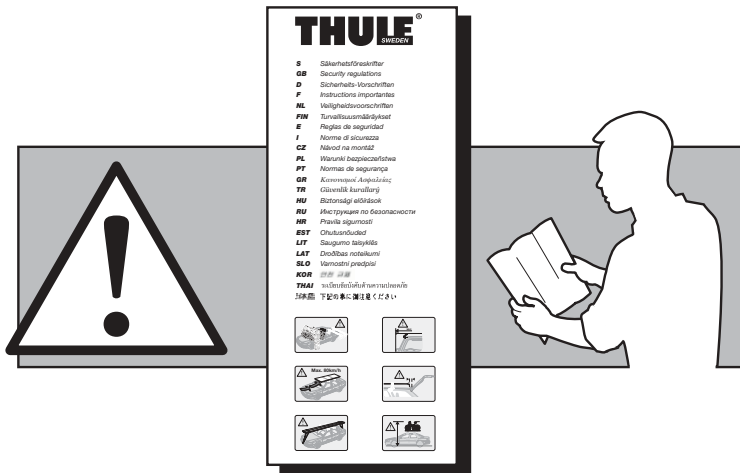

**2**

OPEL Vivaro, 2-dr Single Cab, 01-  
 RENAULT Trafic, 2-dr Single Cab, 01-

M6  
 22 mm x4

20 mm x4

OPEL Vivaro, 4/5-dr Van, 01-  
 OPEL Vivaro, 4/5-dr Van, 01- (with high roof)  
 NISSAN Primastar, 4/5-dr Van, 02-  
 RENAULT Trafic, 4/5-dr Van, 01-  
 RENAULT Trafic, 4/5-dr Van, 01- (with high roof)

x2

x4

x4

x4

x1

**Kit 2112**

1061-99-2112

x4

x4

M6  
 22 mm x4

20 mm x4

x1

**3**

x1

3 Nm

**4**

x2

x4

**1**

x4

x4

**5**

x4

x4

**6**

x1