

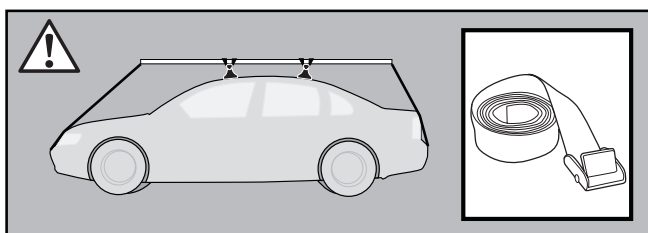
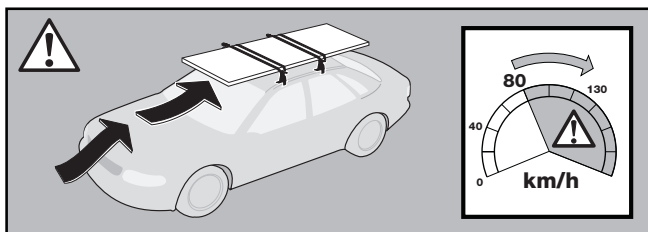


THULE[®]
SWEDEN

- GB** Fitting instructions
- D** Montageanleitung
- F** Instructions de montage
- NL** Montage-instructies
- I** Istruzioni per il montaggio
- E** Instrucciones de montaje
- PT** Instruções de Montagem
- S** Monteringsanvisning
- FIN** Asennusohje
- EST** Paigaldusjuhend
- LAT** Stiprināšanas instrukcija
- LIT** Pritvirtinimo instrukcijos
- PL** Instrukcja montażu
- RU** Инструкции по установке
- CZ** Návod na montáž
- SK** Návod na montáž
- SLO** Navodila za pritrjevanje
- HR** Uputa za sastavljanje
- HU** A felszerelés módja
- GR** Οδηγίες συναρμολόγησης
- TR** Montaj talimatları
- 中文 安装说明
- 日本語 取扱(取付)説明書
- 한국어 장착 지침
- ไทย คำแนะนำการติดตั้ง

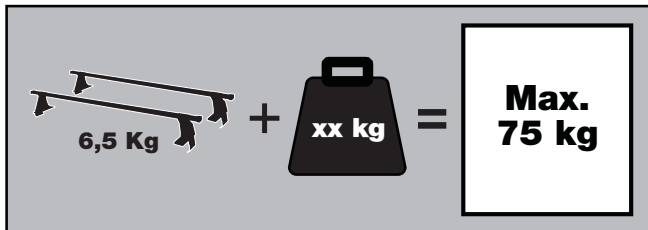

- CITROËN Dispath**, 5-dr Van, 97-
- CITROËN Jumpy**, 5-dr Van, 97-
- FIAT Dobló**, 5-dr Van, 00-03, 04-05, 06-
- FIAT Fiorino**, 3-dr Van, 89-
- FIAT Scudo**, 5-dr Van, 97-
- OPEL Corsa Combo**, 4-dr Van, 94-00
- PEUGEOT Expert**, 5-dr Van, 97-
- RENAULT Avantage**, 3-dr Estate, 00-03

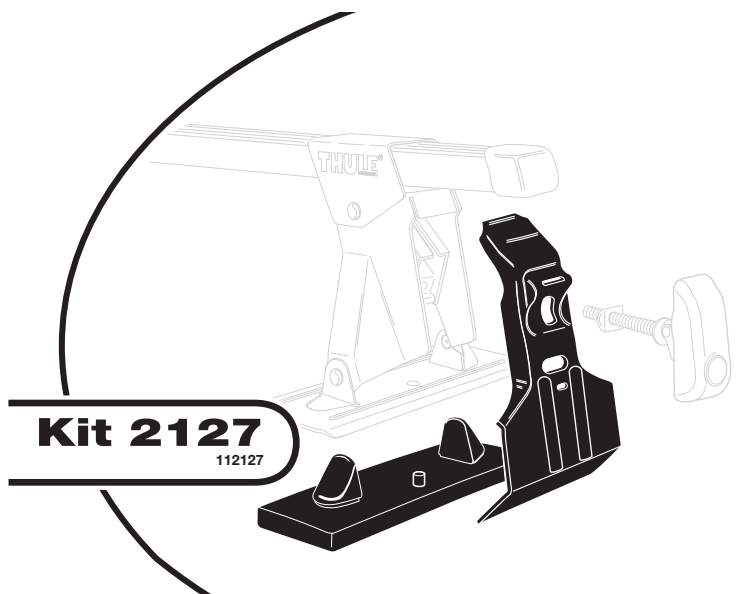


THULE[®]
SWEDEN


Box 69, 330 33 Hillerstorp, SWEDEN
www.thule.com

712*4DF/501-2127-04

Follow me...




x2

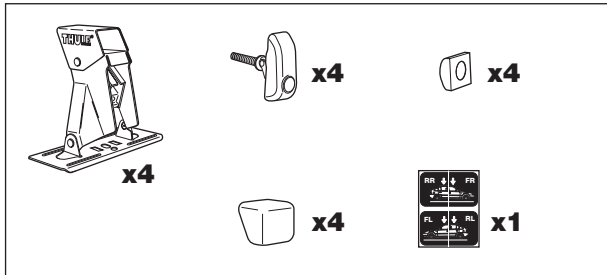



Kit 2127




1061-99-2127

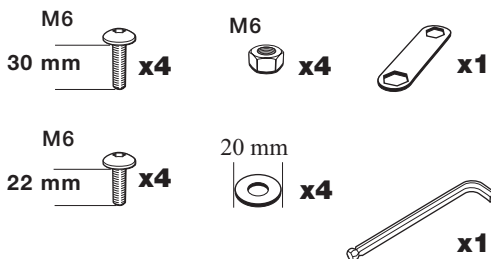

1

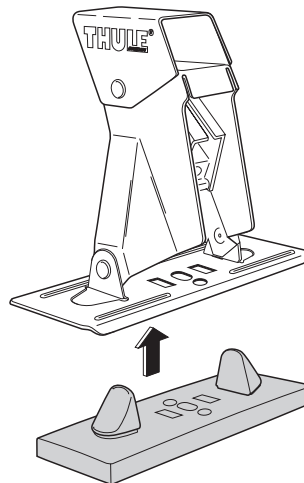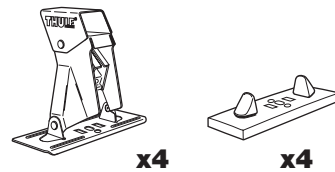

2




x4

CITROËN Dispath,
5-dr Van, 97-

CITROËN Jumpy
5-dr Van, 97-

FIAT Scudo
5-dr Van, 97-


PEUGEOT Expert
5-dr Van, 97-

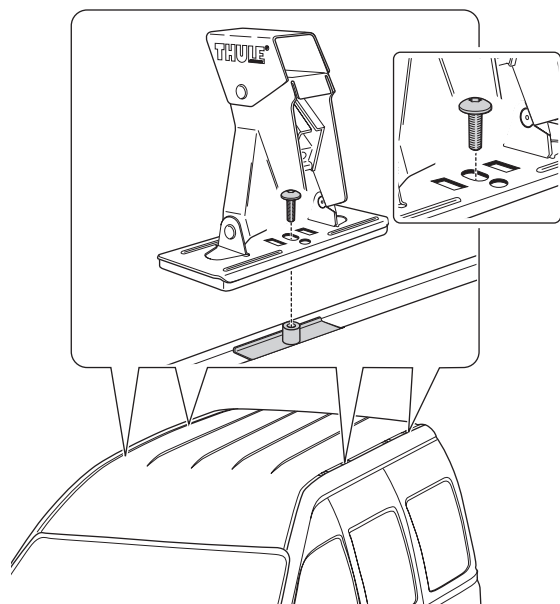

FIAT Doblò
5-dr Van, 00-03, 04-05, 06-





x4

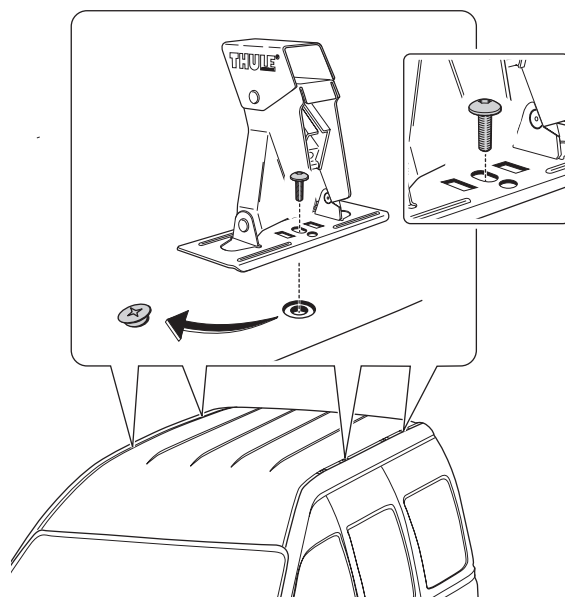

2

FIAT Fiorino
3-dr Van, 89-

30 mm
x4

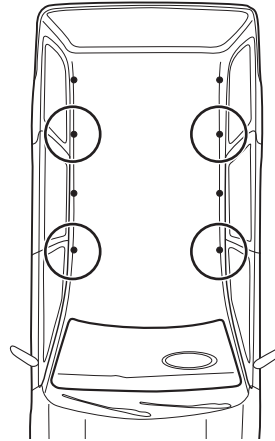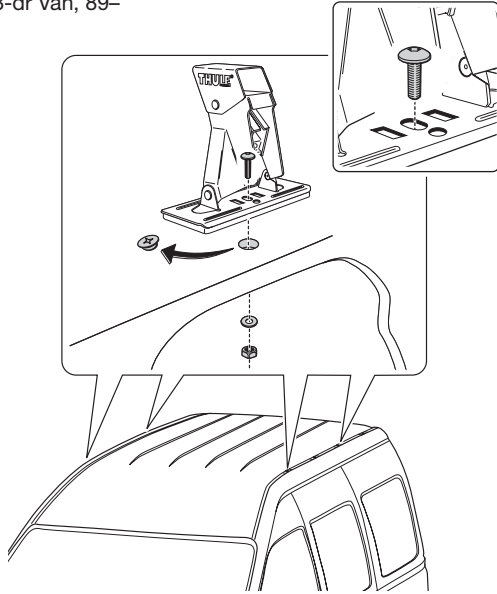



30 mm
x4

x4

x4

x1

OPEL Corsa Combo
4-dr Van, 94-00

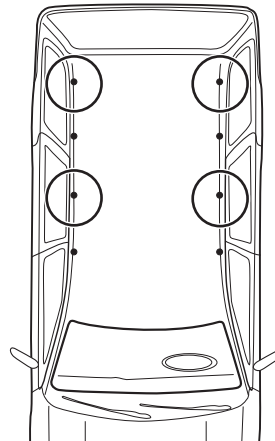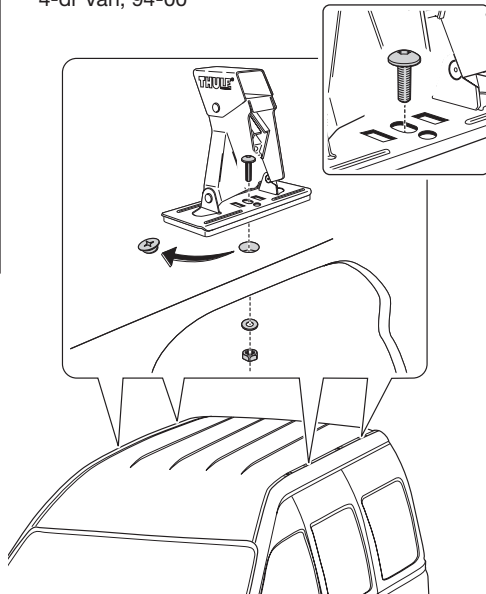

30 mm
x4

RENAULT Avantime
3-dr Estate, 00-03

