


**BACKPACK™**

# FIT CHART

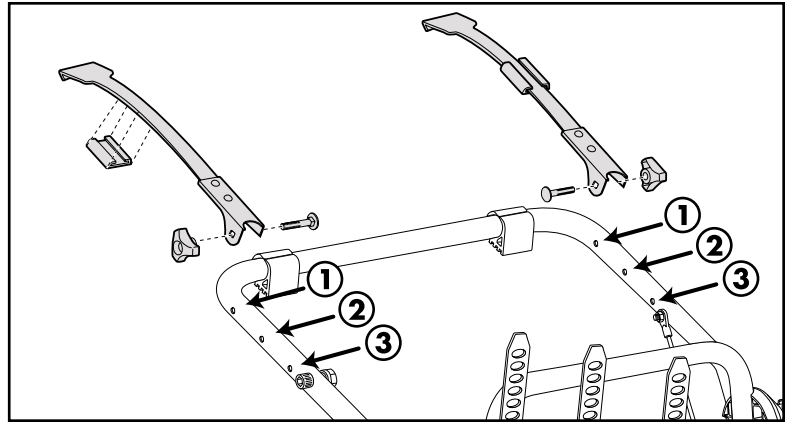

Make/Year	Model	Bodystyle	BackPack Size	BackPack Hole	BackPack Adaptor
<b>Audi</b>					
1997-01	A4	wagon	965	2	
1995-96	A6	wagon	966	3	
1997-98	A6	wagon	966	3	
2001-02	allroad	wagon	no fit		
2001-02	S4	wagon	965	2	
<b>BMW</b>					
1995-99	3 Series	compact ti	no fit		
2000-02	3 Series	wagon	no fit		
1999-02	5 Series	wagon	966		
2000-02	X5		no fit		
<b>Chevrolet</b>					
1990-02	Astro	van	no fit		
1995-02	Blazer	2dr, 4dr, w/hatchback	no fit		
1995-02	Blazer	2dr, 4dr, w/tailgate	no fit		
1995-02	Blazer	w/external spare tire	no fit		
1992-99	Suburban		no fit		
2000-02	Suburban		no fit		
1995-99	Tahoe	2dr, 4dr	no fit		
2000-02	Tahoe		no fit		
1999-02	Tracker		no fit		
2002-02	TrailBlazer	4dr	no fit		
1997-02	Venture		966	2	9111
<b>Chrysler</b>					
2001-02	PT Cruiser		no fit		
1990-95	Town & Country		966	1	
1996-00	Town & Country		966	2	9111
2001-02	Town & Country		no fit		
2001-02	Voyager/Grand Voyager		no fit		
<b>Daewoo</b>					
1998-02	Lanos	3dr	no fit		
1998-02	Nubira	wagon	965	1	
<b>Dodge</b>					
1990-95	Caravan/Grand Caravan		966	1	
1996-00	Caravan/Grand Caravan		966	2	9111
2001-02	Caravan/Grand Caravan		no fit		
1998-02	Durango		966	2	
<b>Ford</b>					
2001-02	Escape		966	3	
1991-99	Escort	wagon	966	3	
2000-02	Excursion		no fit		
1997-02	Expedition		966	1	
1991-95	Explorer	2dr, 4dr	966	2	
1996-00	Explorer	2dr	966	2	
1996-01	Explorer	4dr	966	2	
2002-02	Explorer	4dr	966	2	
2001-02	Explorer Sport	2dr	966	2	
2000-02	Focus	3dr	965	1	

Make/Year	Model	Bodystyle	BackPack Size	BackPack Hole	BackPack Adaptor
<b>Ford continued</b>					
Focus	wagon	966	3		
2002-02	Focus	5dr	965	1	
1996-02	Taurus	wagon	965	1	
1998-98	Windstar		966	1	9111
1999-02	Windstar		966	1	9111
<b>GMC</b>					
2001-02	Denali		no fit		
2000-02	Denali XL		no fit		
1998-01	Envoy		no fit		
2002-02	Envoy	4dr	no fit		
1995-01	S-15 Jimmy, Jimmy	w/external spare tire	no fit		
1995-01	S-15 Jimmy, Jimmy	w/hatchback	no fit		
1995-01	S-15 Jimmy, Jimmy	w/tailgate	no fit		
1990-02	Safari	van	no fit		
1992-99	Suburban		no fit		
1999-99	Yukon		no fit		
2000-02	Yukon		no fit		
2000-02	Yukon XL		no fit		
<b>Honda</b>					
1996-00	Civic	3dr	no fit		
1997-01	CRV		no fit		
1995-02	Odyssey		no fit		
<b>Hyundai</b>					
1997-00	Elantra	wagon	965		
2001-02	Santa Fe		966	2	
<b>Infiniti</b>					
1997-02	QX4	w/o spare tire	966	2	
<b>Isuzu</b>					
1999-01	Amigo		no fit		
2002-02	Axium		966	3	
<b>Jeep</b>					
1991-01	Cherokee		966	3	
1992-98	Grand Cherokee		966	2	
1999-02	Grand Cherokee		966	2	
<b>Kia</b>					
2002-02	Rio	wagon	966	3	
2002-02	Sedona		966	2	9111
<b>Lexus</b>					
1998-02	RX 300		966	3	
<b>Lincoln</b>					
1998-02	Navigator		966	1	
<b>Mazda</b>					
2000-01	MPV		966	2	9111
2002-02	Protégé 5	wagon	no fit		
2001-02	Tribute		966	3	
<b>Mercedes-Benz</b>					
2002-02	C-Class	wagon	no fit		
<b>Mercury</b>					
1998-01	Mountaineer		966	2	
2002-02	Mountaineer	4dr	966	2	
1996-02	Sable	wagon	965	2	
1999-02	Villager		966	1	
<b>Mitsubishi</b>					
2003-03	Cooper	hatchback	965	2	
1990-02	Montero		no fit		
1997-02	Montero Sport		966	1	

Make/Year	Model	Bodystyle	BackPack Size	BackPack Hole	BackPack Adaptor
<b>Nissan</b>					
1996-02	Pathfinder	w/o spare tire	966	2	
1999-02	Quest		966	1	
2000-02	Xterra		966	3	
<b>Oldsmobile</b>					
1996-01	Bravada	w/external spare tire	no fit		
1996-01	Bravada	w/hatchback	no fit		
1996-01	Bravada	w/tailgate	no fit		
2002-02	Bravada	4dr	no fit		
1997-02	Silhouette		966	2	9111
<b>Plymouth</b>					
1990-95	Voyager/Grand Voyager		966	1	
1996-00	Voyager/Grand Voyager		966	2	9111
<b>Pontiac</b>					
1999-02	Montana		966	2	9111
1997-98	Trans Sport		966	2	9111
<b>Saab</b>					
1999-02	9 - 5	wagon	no fit		
<b>Saturn</b>					
2000-02	LW	wagon	965	1	
<b>Subaru</b>					
1998-02	Forester		966	3	
1993-99	Impreza/Impreza Outback	wagon	966	2	
2002-02	Impreza/Impreza WRX	wagon	966	2	
2000-02	Legacy	wagon	966	1	
2000-02	Outback	wagon	966	1	
2000-01	Outback Sport		966	2	
2002-02	Outback Sport		966	2	
<b>Toyota</b>					
1988-92	Corolla	wagon	965	2	
1993-96	Corolla	wagon	966	2	
2001-02	Highlander		966	3	
1991-97	Previa		966	2	9111
2001-02	Sequoia		966	2	9111
1998-02	Sienna		no fit		
<b>Volkswagen</b>					
1993-99	Golf (Type III)		965	3	
1999-02	Golf (Type IV)		965	2	
2001-02	Jetta	wagon	965	1	
1990-97	Passat	wagon	965	1	
1998-01	Passat	wagon	966	3	
2002-02	Passat	wagon	no fit		
<b>Volvo</b>					
1994-97	850	wagon	966	2	9110
2000-02	V40		965	1	
1998-02	V70		966	2	9110



**DESIGN AND QUALITY THULE SWEDEN**  
**Made in Poland FOR/AUX ETC THULE INC.,**  
**THULE INC., 42 SILVERMINE RD.**  
**SEYMOUR, CT 06483**  
[www.thule.com](http://www.thule.com)

Design et qualité Thule Suède.  
Fait en Pologne pour Thule USA.  
THULE INC., 42 SILVERMINE RD.  
SEYMOUR, CT 06483  
[www.thule.com](http://www.thule.com)

**DISEÑO Y CALIDAD THULE SUECIA**  
Hecho en Polonia  
**THULE INC., 42 SILVERMINE RD.**  
**SEYMOUR, CT 06483**  
[www.thule.com](http://www.thule.com)

**501-5381**